

FIG. 1

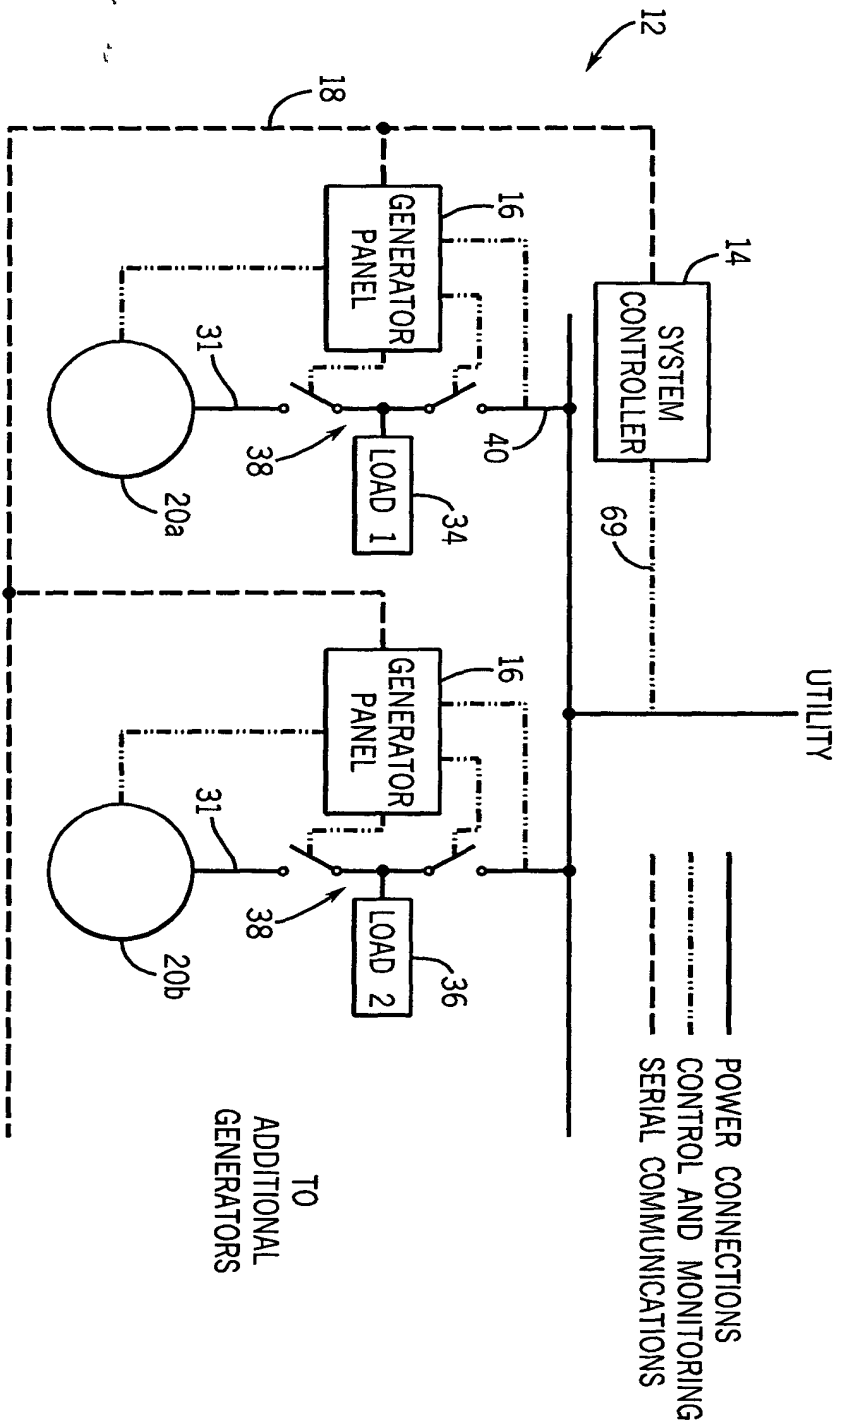


FIG. 2

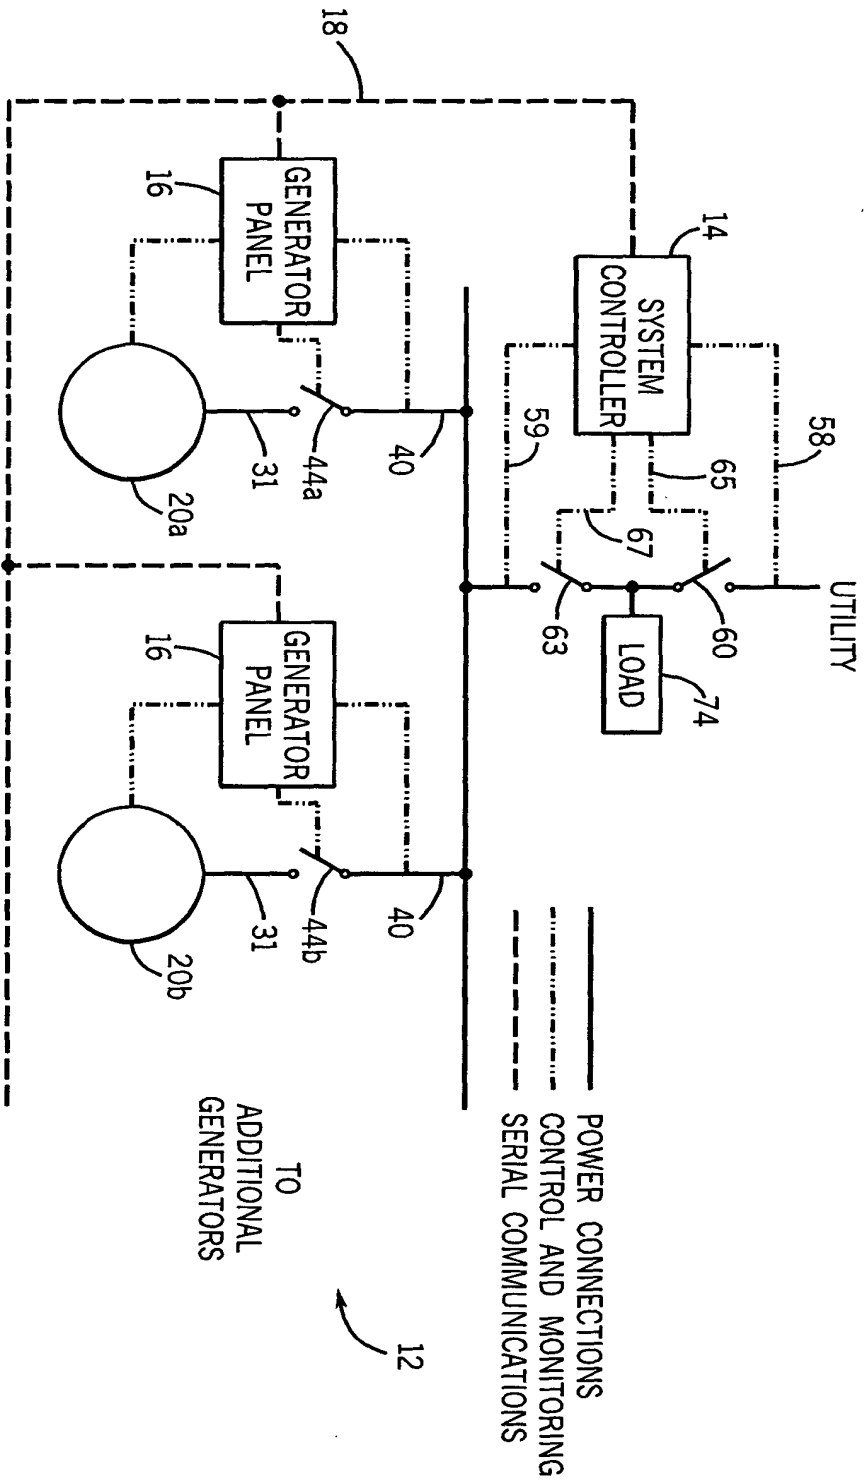


FIG. 3

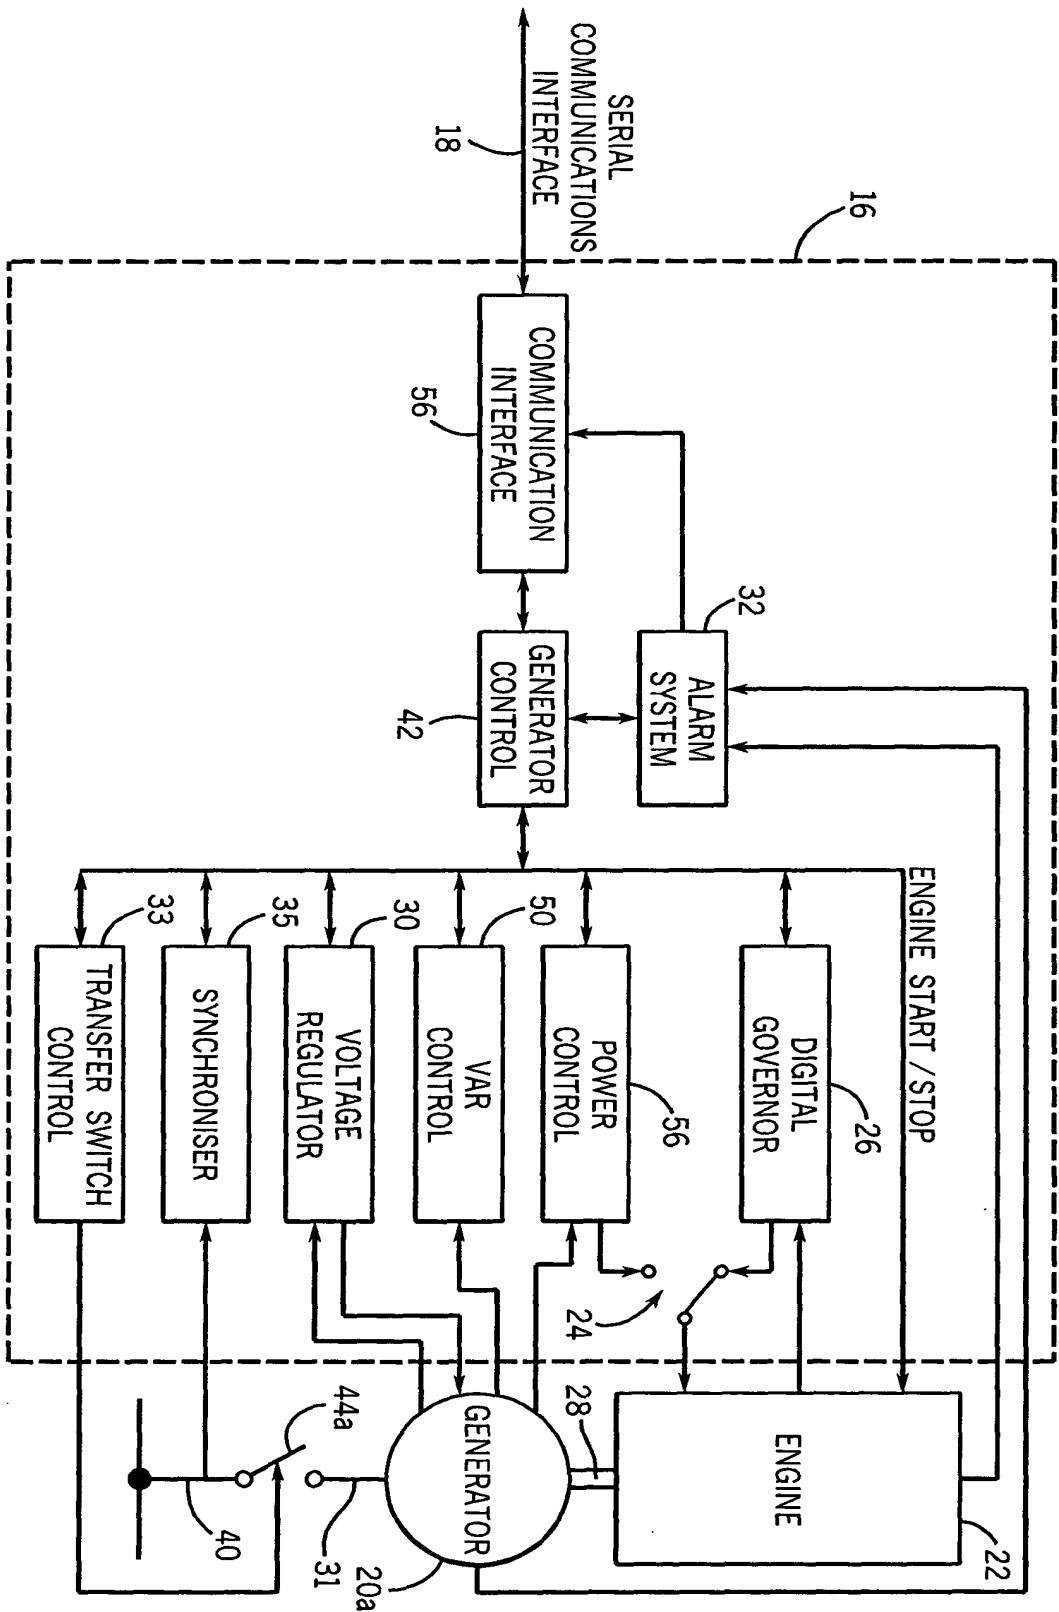
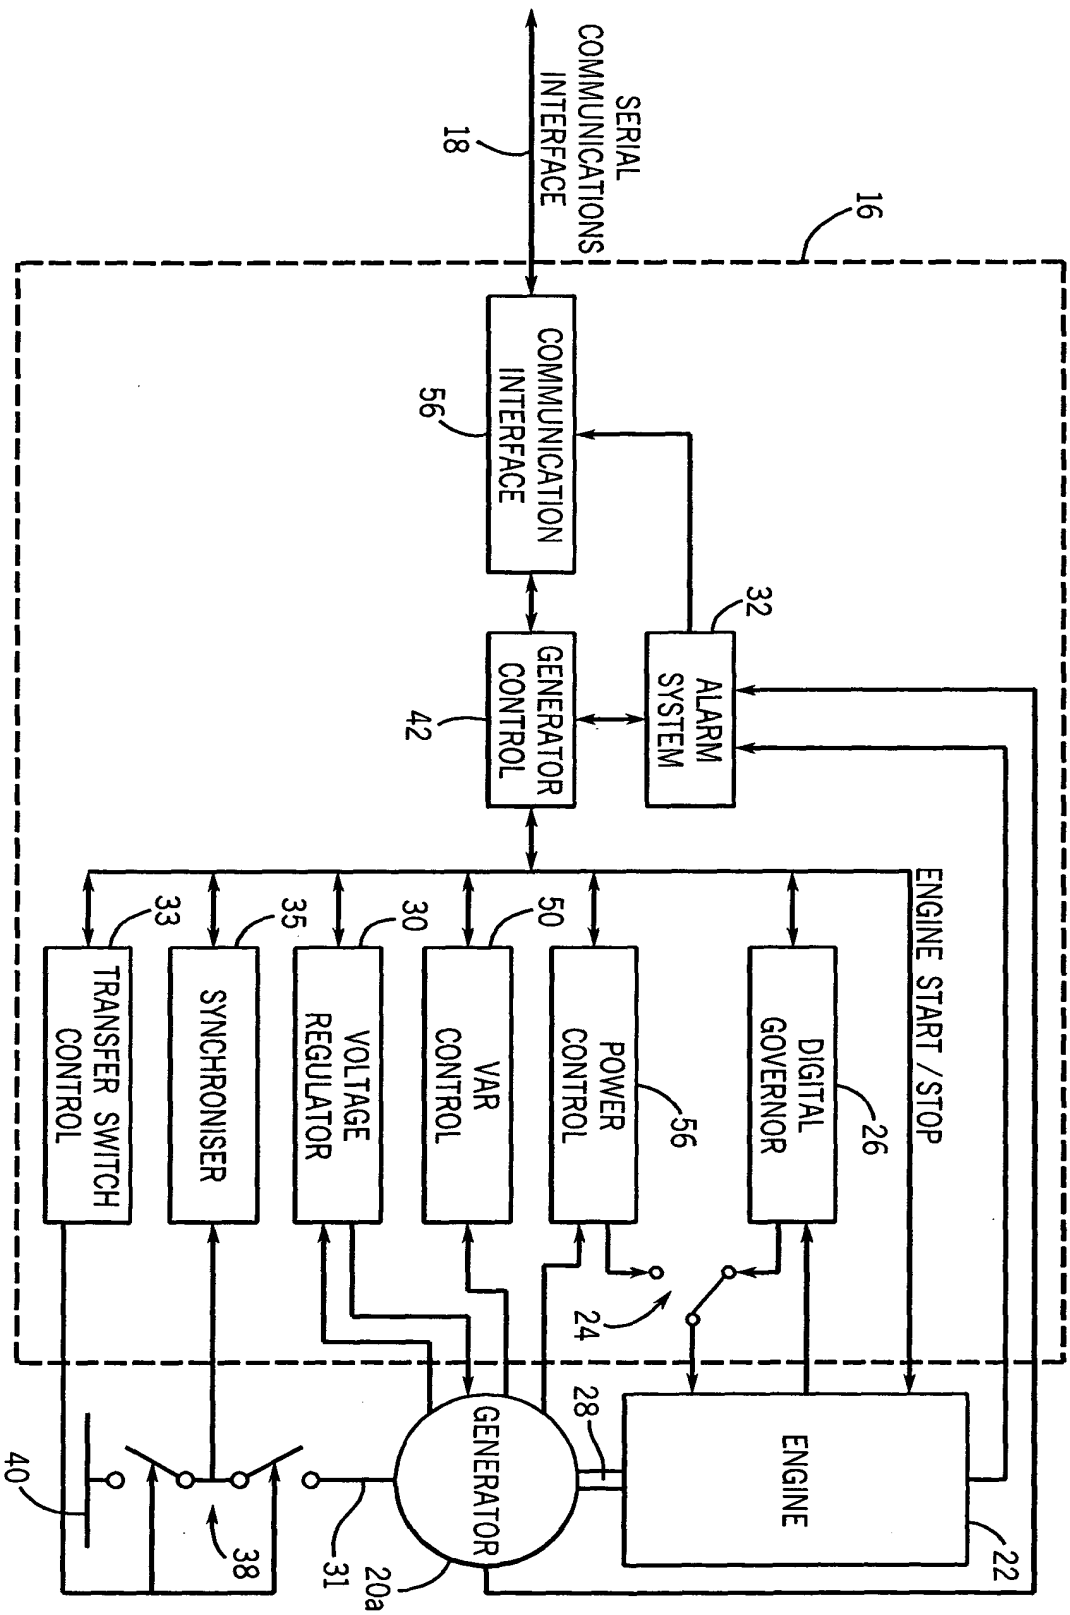


FIG. 4a



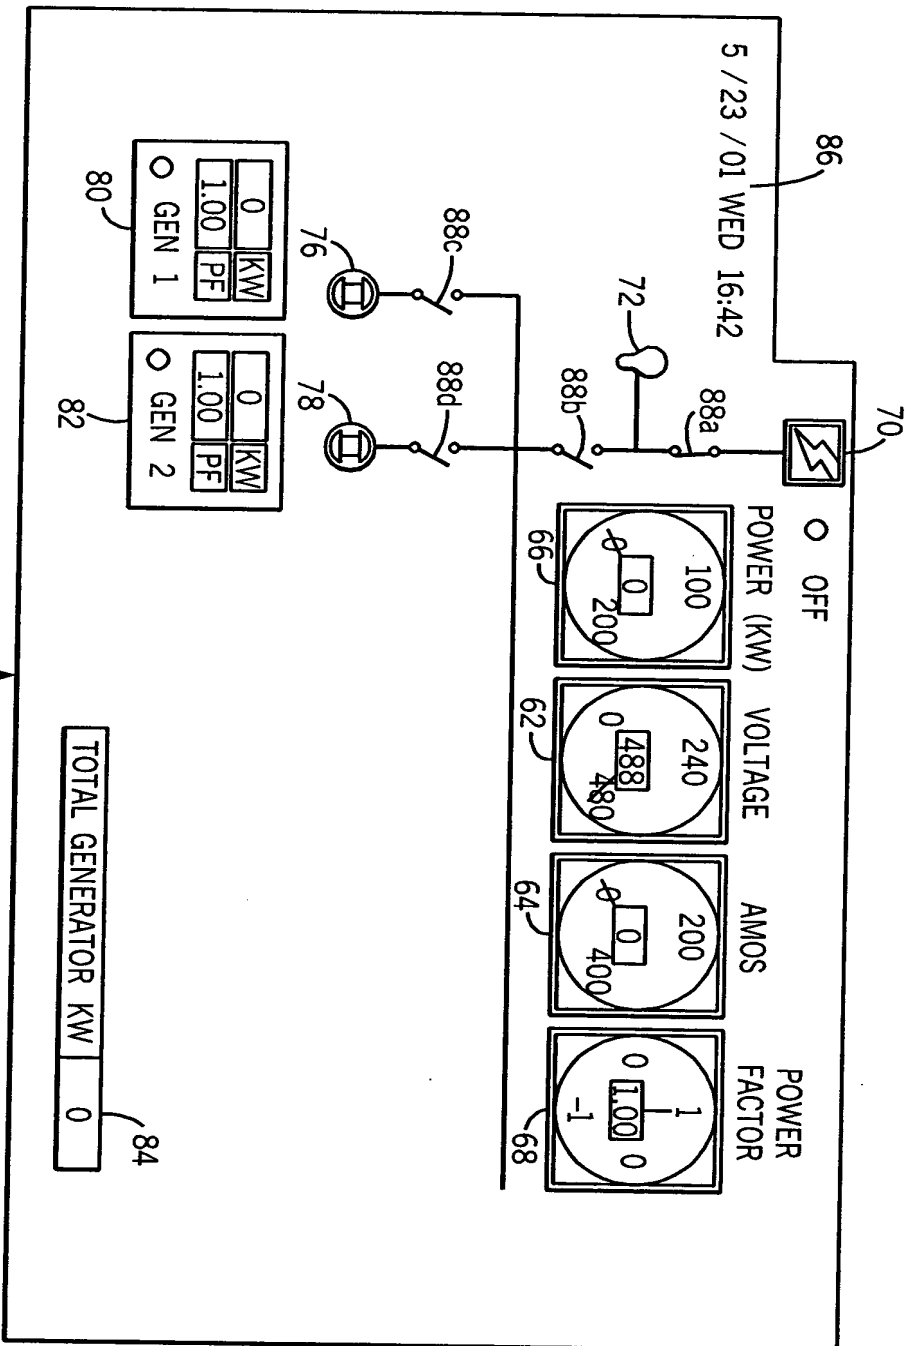


FIG. 5

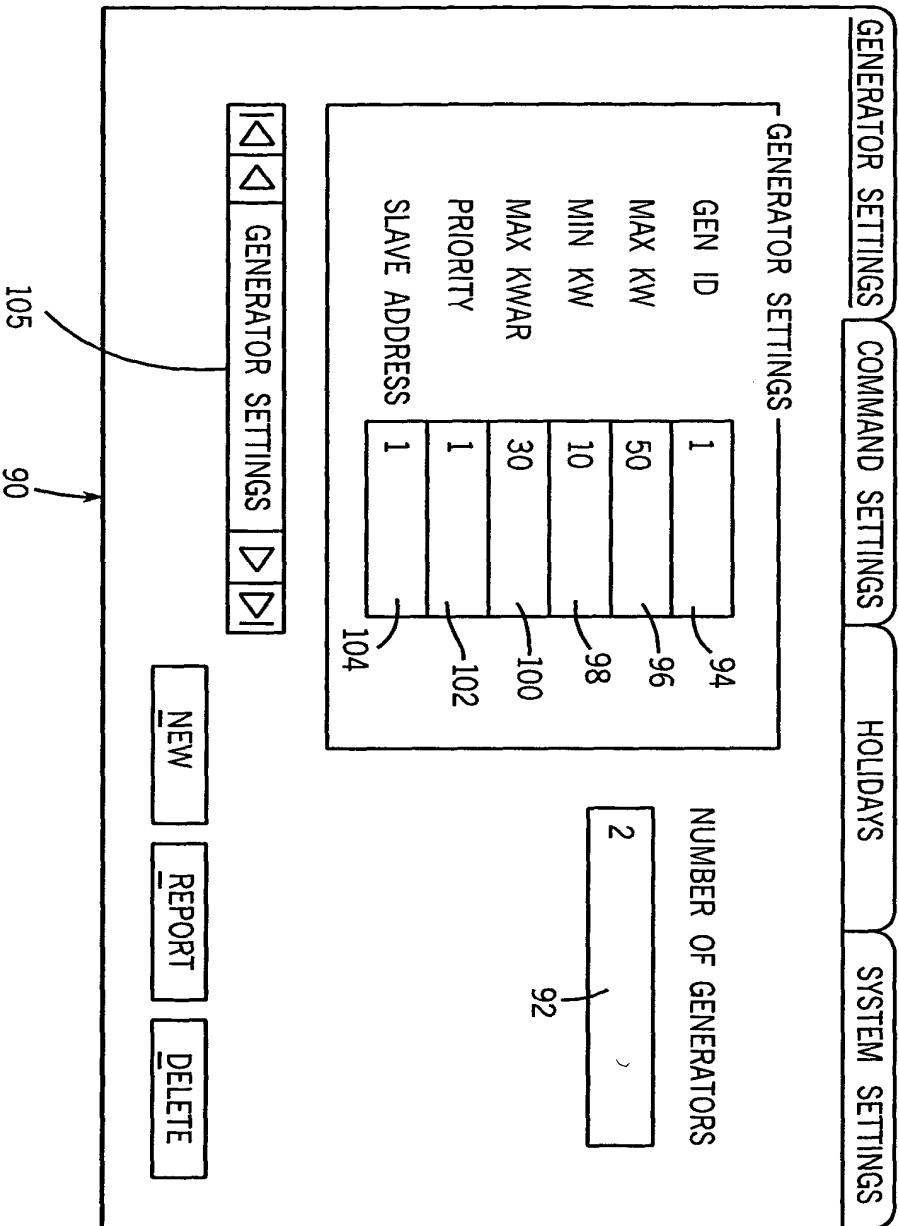


FIG. 6



GENERATOR SETTINGS		COMMAND SETTINGS		HOLIDAYS		SYSTEM SETTINGS	
COMMAND SETTINGS				108			
COMMAND ID		50					
COMMAND MODE		BASE LOAD				110	
50		112				1	
JAN 116		MONTH		1		118	
DEC 120		MONTH		30		122	
8		124		HOUR		0	
20		128		HOUR		0	
132a		130		MIN		132h	
HOLIDAY		132b		SU		132c	
		MO		TU		132d	
		WE		TH		132e	
		FRI		SAT		132f	
		132g					
COMMAND SETTINGS				131			
NEW				REPORT			
DELETE							

FIG. 7

106



GENERATOR SETTINGS		COMMAND SETTINGS		HOLIDAYS		SYSTEM SETTINGS	
HOLIDAY SETTINGS							
HOLIDAY ID		1		135			
MONTH		JAN		136			
DAY		1		138			
HOLIDAY							
NEW							
REPORT							
DELETE							

FIG. 8



GENERATOR SETTINGS	COMMAND SETTINGS	HOLIDAYS	SYSTEM SETTINGS
USER PASSWORD		000000	<div>PASSWORD ENABLE</div> <div><input type="checkbox"/> RS232</div> <div><input type="checkbox"/> RS485</div>
VOLTAGE SEALING FACTOR		200.5	
SYSTEM VOLTAGE		100.5	
		180	

FIG. 9

142

146

148

150

152

PASSWORD ENABLE

☐ RS232

☐ RS485



156

☐

JUNE 2000

☐

SUN	MON	TUE	WED	THU	FRI	SAT
28	29	30	31	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	1
2	3	4	5	6	7	8

☐ TODAY: 12 / 15 / 00

MONTH

DEC 158

WEEKDAY

FRI 164

DAY

15 160

HOUR

10 166

YEAR

00 162

MIN

10 168

OK

CANCEL

FIG. 10